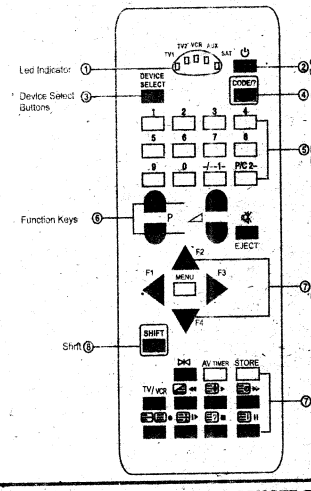

GB

1 HOW TO SETUP YOUR UNIVERSAL REMOTE CONTROL FOR YOUR DEVICES?

A LOCATE YOUR DEVICE CODE FROM THE ENCLOSED LIST AND ENTER THE CODE INTO MEMORY TO ONE OF THE FIVE DEVICE LOCATIONS. (I.e.TV1,TV2,...)

B USE UNIVERSAL AUTOSEARCH (FULL AUTOSEARCH) FACILITY

A TO INSTALL A DEVICE CODE INTO ONE OF THE FIVE DEVICE LOCATIONS:

1–Look up the first code for your equipment In the Brands list at the end of User's Guide.

E.g. –First code for Philips TV → [TV1] [SAT] → UNIVERSAL REMOTE CONTROL code:102

2– By using **"DEVICE SELECT"** button choose the device location to program your equipment.(I.e.TV1, TV2, VCR...) ③

The LED indicator shows which device type is selected.

3– Press **"CODE"** button. ④

4–Enter the three digit code of device (as identified In step 1)using number keys. ⑤

* Many brands have more than one code listed. If the first code does not control correctly, try the next code until your equipment is remote controlled properly.
* If none of the listed codes work, try the UNIVERSAL AUTOSEARCH as in B.
* If an acceptable code is entered the Indicator Led ① will flash rapidly for 4 times.
* If the code entered Is not acceptable then the Indicator Led will turn off IMMEDIATELY.
* The Led Indicator Led stays off until you press the code button again and enter an acceptable code. "Not Accepted" means; entering a code not available in the code List or pressing a button other than numeric buttons while in the code program mode.
* If after activating steps 2 and 3, step 4 Is not activated for 10 seconds then the programming mode Is deleted. To start programming go back to step 2: Programming mode Is also deleted if after activating steps 2 and 3, a button other than number buttons Is pressed.

B UNIVERSAL AUTOSEARCH. (FULL AUTOSEARCH) :

1- TURN ON your device. (TV, SAT, VCR, HI–FI, ETC.)
In case of VCR or HI–FI turn on the device and Insert a cassette or a disc.
2– Select corresponding device type (TV, VCR, AUX, SAT) by using "DEVICE SELECT" button.⑤
3- Press <CODE> button. ④
4–Direct your UNIVERSAL REMOTE CONTROL toward your device.
5- Press OFF < ⏻ > key ② and KEEP IT PRESSED until your device turns off or In case of VCR or. HI-FI, a change takes place. As OFF < ⏻ > button Is pressed Automatic Full Search starts covering the device range (TV, VCR or AUX) according the device preprogrammed at that location. Indicator display ted ① lashes ON/OFF as different models are searched.
6– When the device under test (I.e. Your TV) turns OFF stop pressing the OFF < ⏻ > button ② **IMMEDIATELY**. As soon as the OFF < ⏻ > button ② Is released, that model is memorized In memory and Indicator LED flashes 4 times Indicating the end of Autosearch operation.
NOTE 1: In Autosearch mode after all available codes have been searched through, the Indicator LED ① flashes 4 times to Indicate end of autosearch.
NOTE 2: Buttons F1 / F2 / F3 / F4 are Extra Function Keys ⑦. Depending up on the model of remote control selected, the F1 / F2 / F3 and F4 buttons controls supplementary functions not contained In 30 function keys. Hence total control functions are increased to 34 by the addition of F1 / F2 / F3 and F4 buttons.
NOTE 3: UNIVERSAL REMOTE CONTROL keeps the selected codes In its memory while you change batteries (for 10 minutes).

2 HOW TO IDENTIFY A CODE STORED IN A DEVICE LOCATION?

It Is possible to identify the code number that have been programmed into one of the five device locations.
1- Press«**DEVICE SELECT**» button and select device with unknown code.
2- First press and HOLD **"SHIFT"** button then press "CODE" button once.
As soon as the **"CODE"** button is pressed the Led Indicator starts flashing. Count the number of Flashes in each of the 3 digit code.
- Sum of short flashes Indicate the number in that digit.
- Zero Is Indicated by a long single flash.
- Between digits there will be a pause of 2 seconds.

EXAMPLE :CODE = 107
1 short flash - pause - 1 long flash - pause - 7 short flashes.